

## 2007 Chevrolet EQUINOX

Submodel: LT | Engine Type: V6 | Liters: 3.4

Fuel Delivery: FI | Fuel: GAS


### Instrument Panel Electrical Center or Junction Block Replacement

#### Removal Procedure

**Important**


Record all preset radio stations.

1. Turn the ignition OFF.
2. Remove the screws from the battery coding box. Remove the battery cover.
3. Disconnect the negative battery cable. Refer to Battery Negative Cable Disconnection and Connection .
4. Disconnect the positive battery cable.
5. Remove the console. Refer to Console Replacement .

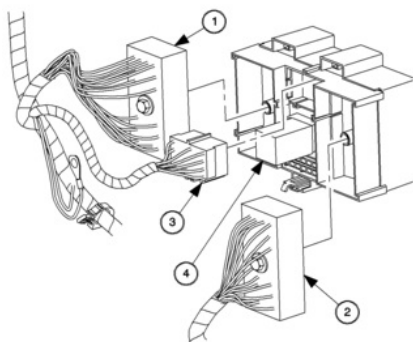

[Click to Enlarge](#)

6. Remove the nut holding the following fuse block connectors to the back of the I/P fuse block (4):
  - The body connector (1)
  - The I/P connector (2)
  - The I/P connector (3)

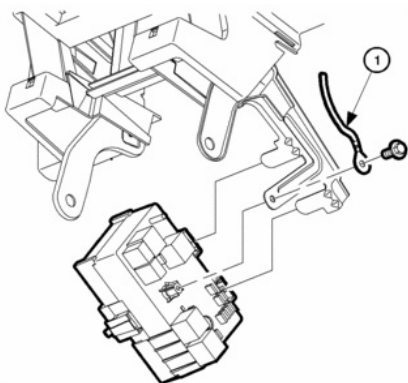


[Click to Enlarge](#)

7. Remove the bolt holding the fuse block into place.
8. Remove the ground wire (1).
9. Remove the fuse block.

#### Installation Procedure

**Caution!**

Refer to Fastener Notice in Cautions and Notices.

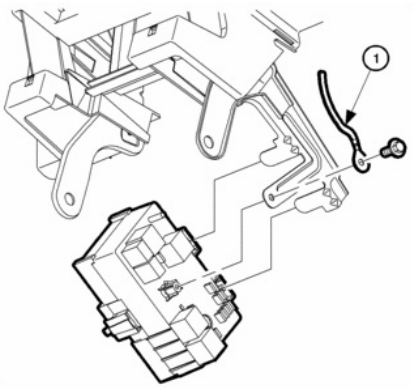


[Click to Enlarge](#)

1. Install the fuse block and attach the ground wire (1) and attach the bolt.

**Tighten**

Tighten the bolt to 10 N-m (89 lb in).

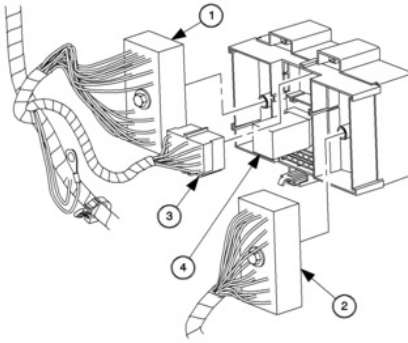

[Click to Enlarge](#)

2. Connect the harness connectors to the back of the I/P fuse block (4).

**Tighten**

Tighten the connectors to 4 N-m (35 lb in).

3. Install the console. Refer to Console Replacement .
4. Connect the positive battery cable.

**Tighten**

Tighten the bolt to 17 N-m (13 lb ft).

5. Connect the negative battery cable.

**Tighten**

Tighten the bolt to 17 N-m (13 lb ft).

6. Install the battery cooling box cover and install the screws.

**Tighten**

Tighten the screws to 2 N-m (18 lb in).

7. Set the radio stations to the preset selections.