


2006 Chevrolet Equinox

Submodel: | Engine Type: | Liters:

Fuel Delivery: | Fuel:

Recirculation Actuator Replacement


Removal Procedure

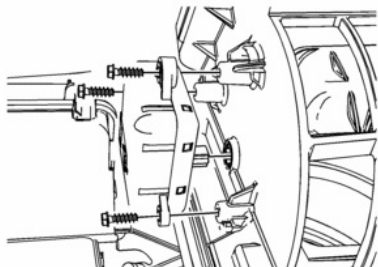

[Click to Enlarge](#)

1. Remove the instrument panel upper trim panel. Refer to Trim Panel Replacement - Instrument Panel (I/P) Upper .
2. Disconnect the electrical connector from the recirculation actuator.
3. Remove the recirculation actuator screws from the HVAC module.
4. Remove the recirculation actuator from the HVAC module.

Installation Procedure

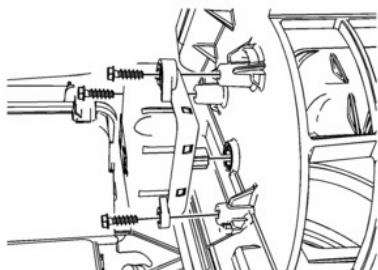

[Click to Enlarge](#)

1. Align the recirculation actuator with the door shaft and rotate into position.

Caution!

Refer to Fastener Notice in Cautions and Notices.

2. Install the recirculation actuator screws to the HVAC module.

Tighten

Tighten the screws to 1.5 N·m (13 lb in).

3. Connect the electrical connector to the recirculation actuator.
4. Cycle the ignition and verify proper operation.
5. Install the instrument panel upper trim panel. Refer to Trim Panel Replacement - Instrument Panel (I/P) Upper .