



Windshield Washer Solvent Container and Pump Replacement

Removal Procedure

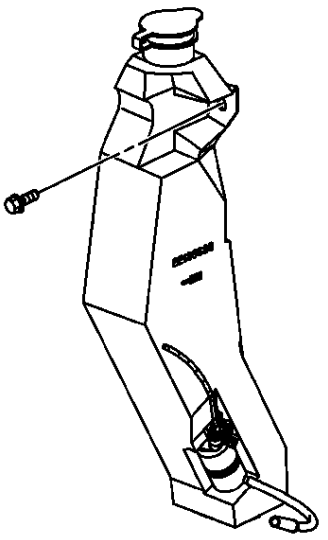


Important: Do not disconnect the brake lines from the master cylinder.

1. Remove the master cylinder. Refer to [Master Cylinder Replacement](#) in Hydraulic Brakes.
2. Set the master cylinder aside.
3. Remove the bolt from the washer solvent container.

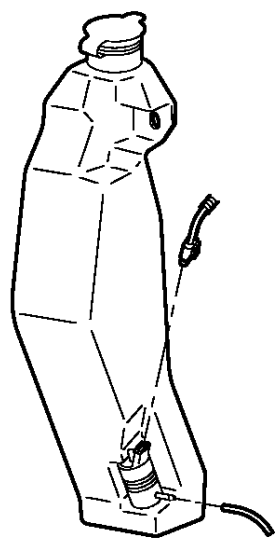


4. Lift the washer solvent container up enough to access the washer hose and the electrical connector.
5. Disconnect the washer hose from the washer pump.
6. Disconnect the electrical connector from the washer pump.
7. Remove the washer solvent container from the vehicle.

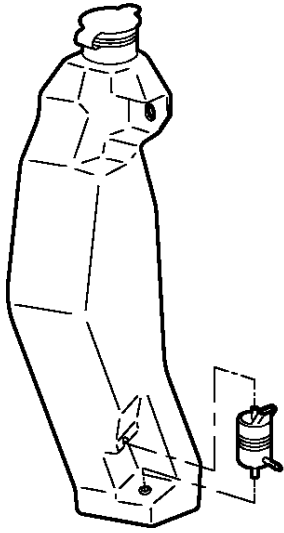




8. Remove the washer pump from the washer solvent container.

Installation Procedure

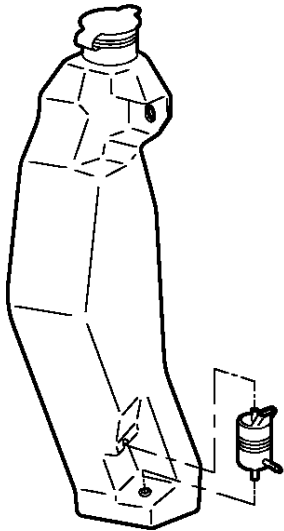


1. Install the washer pump in the washer solvent container.

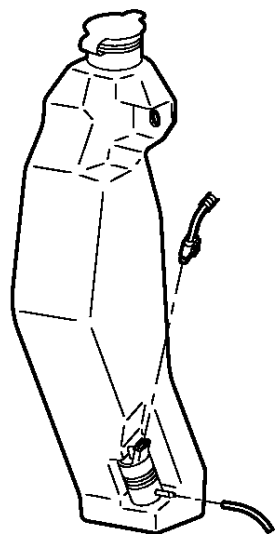

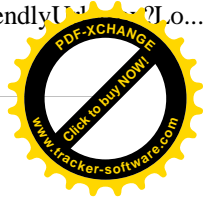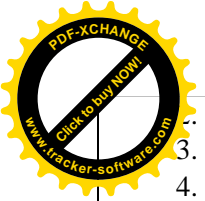

2. Connect the electrical connector to the washer pump.
3. Connect the washer hose to the washer pump.
4. Position the washer solvent container into the locating holes in the chassis.

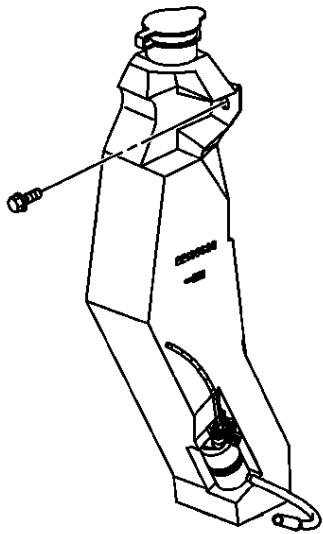

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

5. Install the washer solvent container with the bolt.

Tighten:

Tighten the bolt to 10 [n-m] (89 lb in).

6. Install the master cylinder. Refer to [Master Cylinder Replacement](#) in Hydraulic Brakes.

"Portions of materials contained herein have been reprinted with permission of General Motors Corporation, Service and Parts Operations" License Agreement #0410810.