


HVAC Module Assembly Replacement

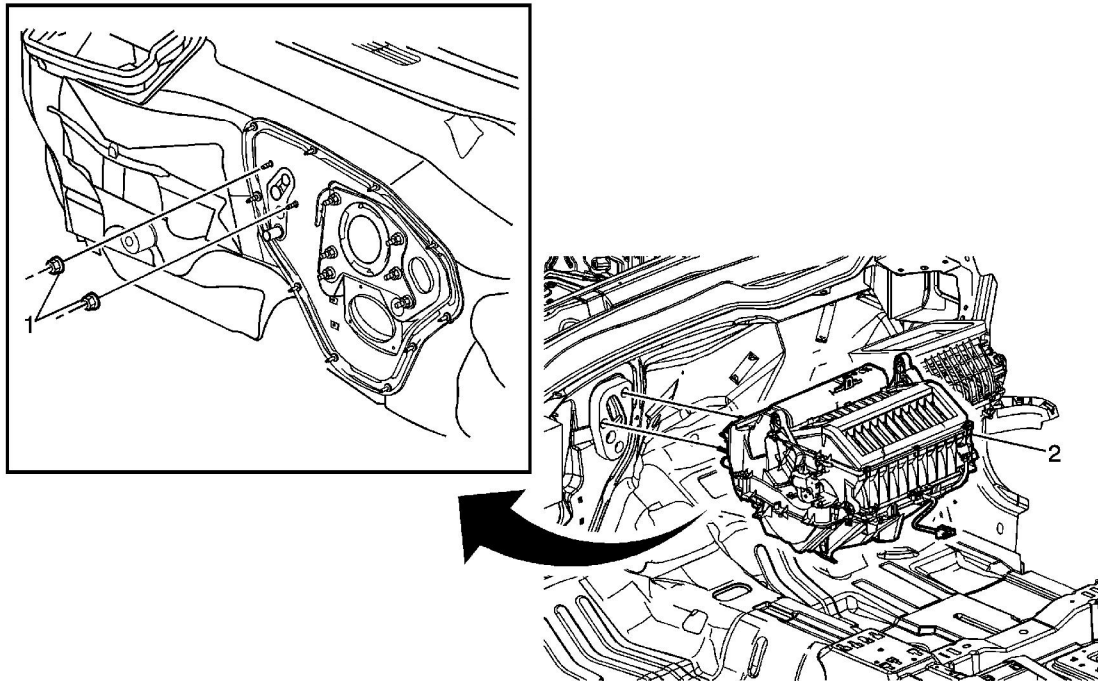

Callout	Component Name
<p>Caution: Refer to Battery Disconnect Caution in the Preface section.</p>	
<p>Notice: Refer to Fastener Notice in the Preface section.</p>	
<p><i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications.</p>	
<p>Preliminary Procedure</p>	
<ol style="list-style-type: none"> 1. Disconnect the battery negative cable. Refer to Battery Negative Cable Disconnection and Connection. 2. Recover the refrigerant. Refer to Refrigerant Recovery and Recharging. 3. Drain the cooling system. Refer to Cooling System Draining and Filling. 4. Remove the inlet heater hose from the heater core. Refer to Heater Inlet Hose Replacement. 5. Remove the outlet heater hose from the heater core. Refer to Heater Outlet Hose Replacement. 6. Remove the air conditioning evaporator thermal expansion valve tube from the thermal expansion valve. Refer to Air Conditioning Evaporator Thermal Expansion Valve Tube Replacement. 7. Remove the evaporator drain tube from the evaporator case. 8. Remove the instrument panel (I/P) carrier. Refer to Instrument Panel Carrier Replacement. 	

© 2013 General Motors Corporation. All rights reserved.

1	Nut, Heater and Air Conditioning Module Tighten 10 N·m (89 lb in)
2	Module Assembly, Heater and Air Conditioning Evaporator