


Temperature Valve Actuator Replacement - Right Side

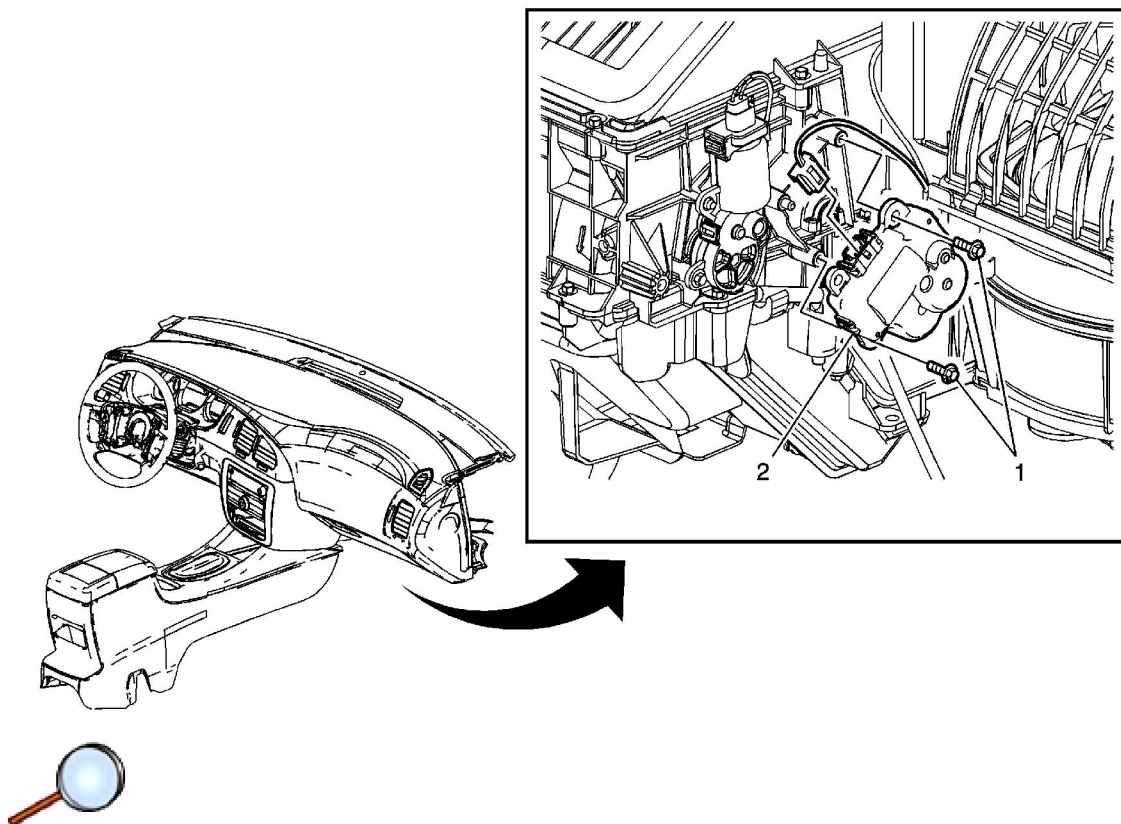

Callout	Component Name
Preliminary Procedure <ol style="list-style-type: none"> 1. Remove the instrument panel (I/P) compartment inner panel. Refer to Instrument Panel Compartment Inner Panel Replacement . 2. Disconnect the right air temperature actuator electrical connector. 	
1	Temperature Actuator Screw - Right (Qty: 2) Notice: Refer to Fastener Notice in the Preface section. Tighten 1.5 N·m (13 lb in)
2	Temperature Actuator - Right Tip Refer to Control Module References for programming and setup information.