


Temperature Valve Actuator Replacement - Left Side

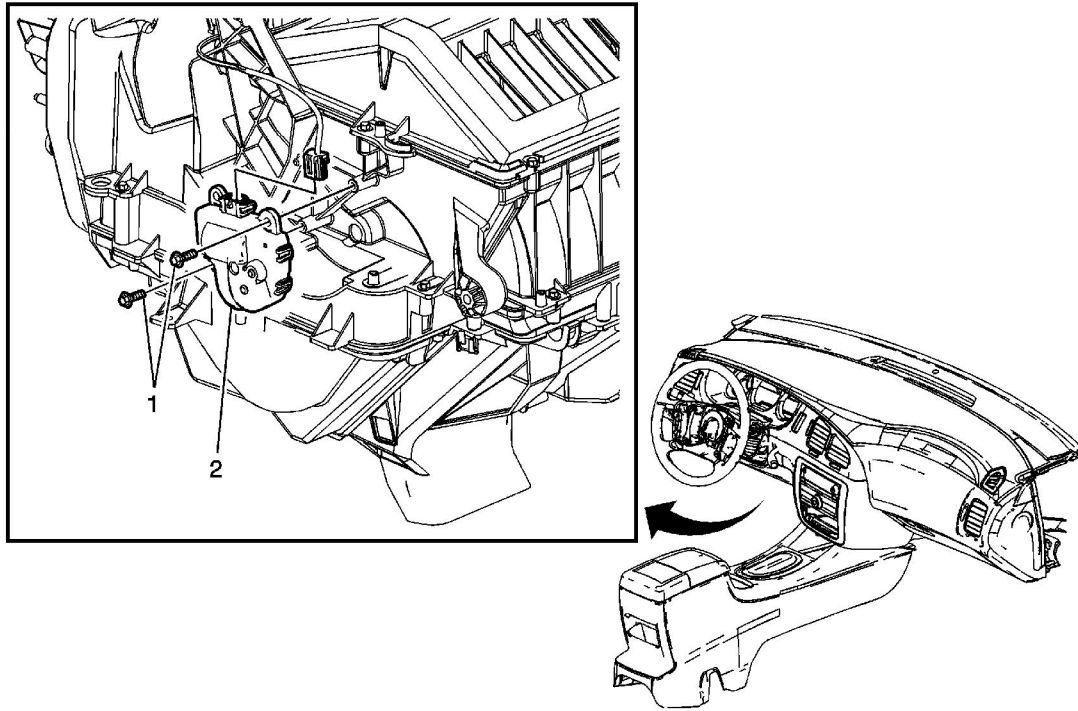

Callout	Component Name
Preliminary Procedure <ol style="list-style-type: none"> 1. Remove the left knee bolster bracket. Refer to Driver Knee Bolster Bracket Replacement . 2. Disconnect the left air temperature actuator electrical connector. 	
1	Temperature Actuator Screw - Left (Qty: 2) Notice: Refer to Fastener Notice in the Preface section. Tighten 1.5 N·m (13 lb in)
2	Temperature Actuator - Left Tip Refer to Control Module References for programming and setup information.