


Mode Valve Actuator Replacement

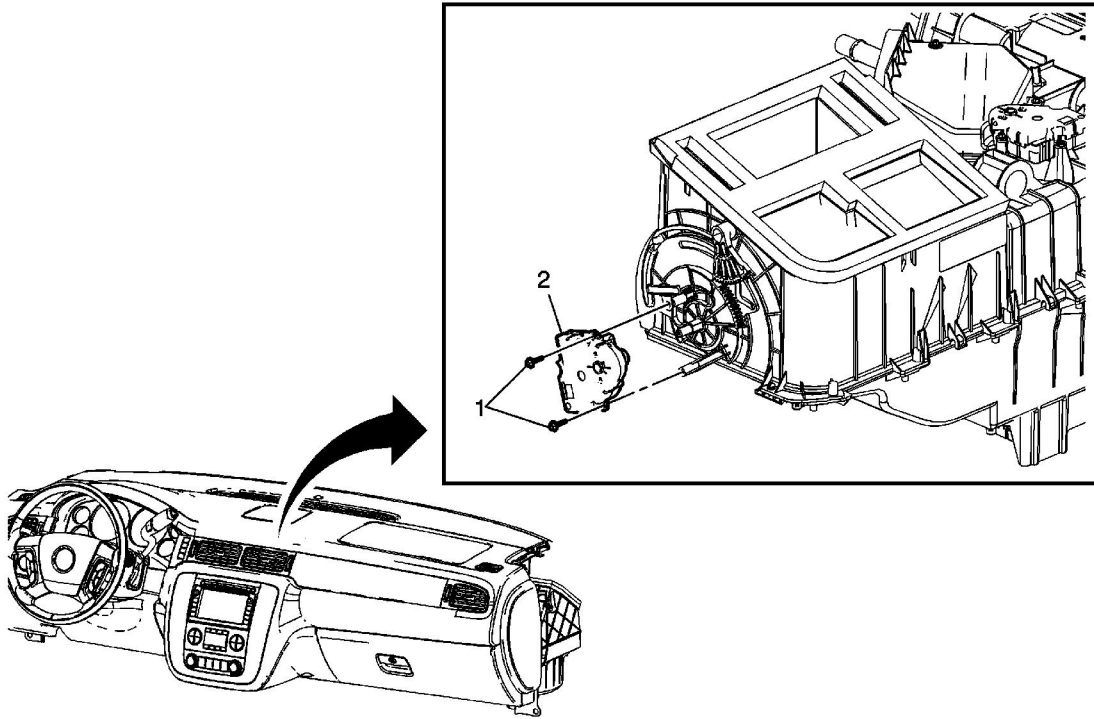

Callout	Component Name
<p>Notice: In order to avoid actuator damage, DO NOT apply power to the actuator when it is not installed in the HVAC module.</p>	
<p>Preliminary Procedure</p>	
<ol style="list-style-type: none"> 1. Remove the knee bolster. Refer to Knee Bolster Replacement . 2. Remove the air outlet duct - floor LH. Refer to Floor Air Outlet Duct Replacement - Left Side . 3. Disconnect the electrical connector from the mode actuator. 	
<p>1</p>	<p>Mode Actuator Screw (Qty: 2)</p> <p>Notice: Refer to Fastener Notice in the Preface section.</p> <p>Tighten 1.6 N·m (14 lb in)</p>
<p>2</p>	<p>Mode Actuator</p> <p>Procedure</p> <p>Re-calibrate the mode actuator. Refer to Actuator Recalibration .</p>

Tip

Mode actuator cam is now accessible.