


Ambient Light Sensor Replacement

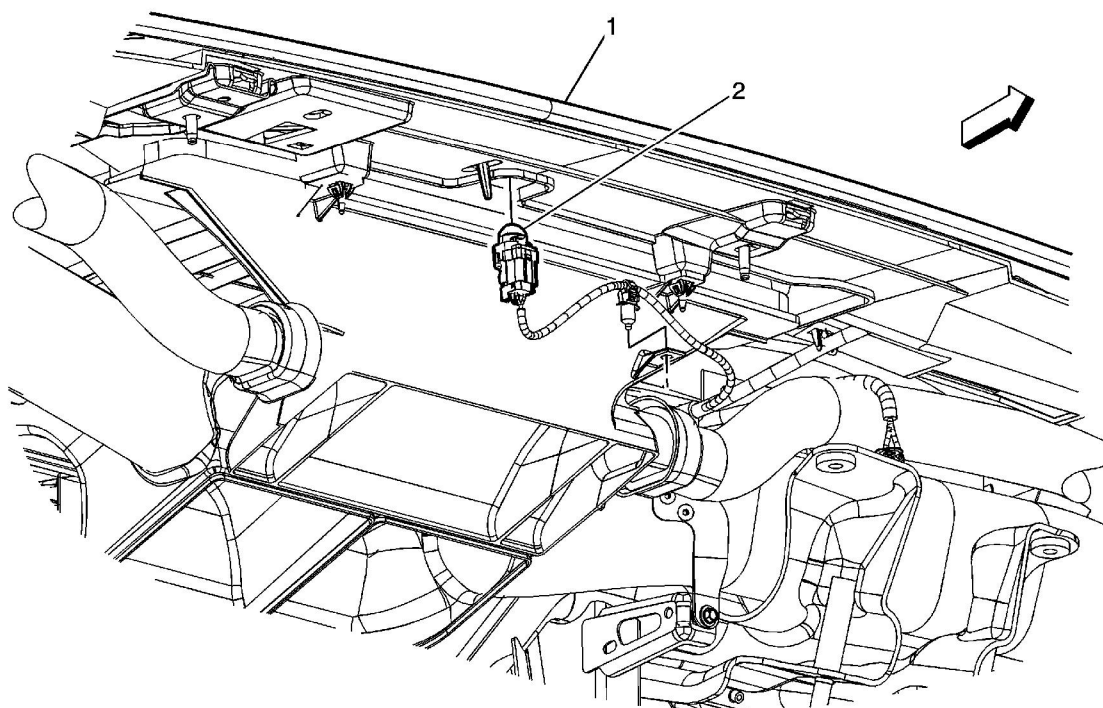

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Instrument Panel Trim Panel Tip Refer to Instrument Panel Upper Trim Panel with Windshield Defroster Nozzle Grille Replacement .
2	Headlamp Auto Control Ambient Light Sensor Assembly Tip 1. Twist and pull down to remove. 2. Disconnect electrical connector.