Page 1 of 2 Service Information

## **Document ID# 455527** 1998 Chevrolet/Geo Chevy Suburban - 4WD

Print

## **Automatic Day-Night Mirrors System Check Temperature**

Table 1: Outside Air Temperature Sensor, Temperature and Resistance Table

Action	Normal Result(s)	Abnormal Result(s)*
<ol> <li>Turn ignition to the run position.</li> <li>Toggle between compass and temperature setting on mirror.</li> <li>Check compass/temperature display.</li> </ol>	Mirror display alternates between compass and temperature readings.	Mirrors - Compass Display Inoperative or Inaccurate
<ol> <li>Position vehicle outside away from buildings, antenna towers, etc</li> <li>Exit vehicle and with a known good compass, take a reading in which the vehicle is headed.</li> <li>Toggle the mirror display to the compass position.</li> <li>Note compass reading in mirror display.</li> </ol>	Mirror display shows same heading as known good compass.	Mirrors - Compass Display Inoperative or Inaccurate
<ol> <li>Exit vehicle and with a known good thermometer, take an outside temperature reading.</li> <li>Toggle the mirror display to the temperature position.</li> <li>Note temperature reading in mirror display.</li> </ol>		Mirrors - Temperature Inoperative or Inaccurate
	<ol> <li>Turn ignition to the run position.</li> <li>Toggle between compass and temperature setting on mirror.</li> <li>Check compass/temperature display.</li> <li>Position vehicle outside away from buildings, antenna towers, etc</li> <li>Exit vehicle and with a known good compass, take a reading in which the vehicle is headed.</li> <li>Toggle the mirror display to the compass position.</li> <li>Note compass reading in mirror display.</li> <li>Exit vehicle and with a known good thermometer, take an outside temperature reading.</li> <li>Toggle the mirror display to the temperature position.</li> <li>Note temperature reading in mirror</li> </ol>	<ol> <li>Turn ignition to the run position.</li> <li>Toggle between compass and temperature setting on mirror.</li> <li>Check compass/temperature display.</li> <li>Position vehicle outside away from buildings, antenna towers, etc</li> <li>Exit vehicle and with a known good compass, take a reading in which the vehicle is headed.</li> <li>Toggle the mirror display to the compass position.</li> <li>Note compass reading in mirror display.</li> <li>Exit vehicle and with a known good thermometer, take an outside temperature reading.</li> <li>Toggle the mirror display to the temperature reading.</li> <li>Toggle the mirror display to the temperature reading.</li> <li>Note temperature reading in mirror</li> <li>Note temperature reading in mirror</li> </ol>

Outside Air Temperature Sensor, Temperature and Resistance Table

°C	°F	MIN. OHMS	MAX. OHMS
-20	-4	9.46k	9.94k
-15	5	7.12k	7.45k
-10	14	5.42k	5.64k
-5	23	4.14k	4.31k
0	32	3.20k	3.33k
5	41	2.49k	2.58k
10	50	1.96k	2.01k
15	59	1.54k	1.59k
20	68	1.23k	1.26k

Service Information Page 2 of 2

25	77	0.98k	1.01k
30	86	0.79k	0.81k
35	95	0.64k	0.66k
40	104	0.52k	0.53k
45	113	0.43k	0.44k

Print

		D
<- Back	Forward ->	Document ID# 455527
		1998 Chevrolet/Geo Chevy Suburban - 4WD