



(GY)

Function
Primary Positive Voltage
Not Used
Ignition 1 Voltage
Ignition 1 Voltage (NQF/NQH)
Ignition 1 Voltage
Ignition Voltage (PTO/EXPORT)
Ground (U42/UK6)
Not Used
Ground
Emergency Lamp Control

Junction Block-Left I/P, Bottom View

