


2010 Chevrolet Equinox

Submodel: | Engine Type: | Liters:
Fuel Delivery: | Fuel:

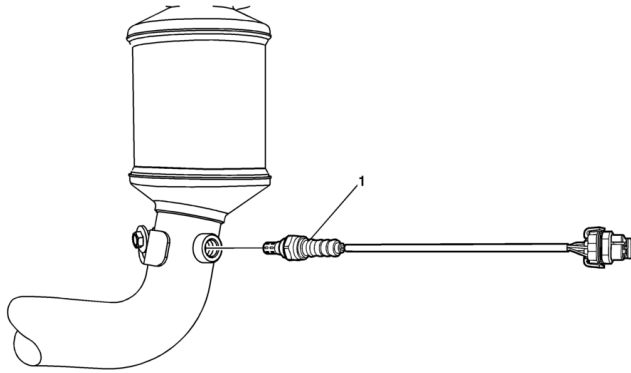

Heated Oxygen Sensor Replacement - Sensor 2

Callout

Component Name

Preliminary Procedure

Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.

Heated Oxygen Sensor

Caution: Do not remove the pigtail from either the heated oxygen sensor (HO2S) or the oxygen sensor (O2S). Removing the pigtail or the connector will affect sensor operation.

Handle the oxygen sensor carefully. Do not drop the HO2S. Keep the in-line electrical connector and the louvered end free of grease, dirt, or other contaminants. Do not use cleaning solvents of any type.

Do not repair the wiring, connector or terminals. Replace the oxygen sensor if the pigtail wiring, connector, or terminal is damaged.

This external clean air reference is obtained by way of the oxygen sensor signal and heater wires. Any attempt to repair the wires, connectors, or terminals could result in the obstruction of the air reference and degraded sensor performance.

The following guidelines should be used when servicing the heated oxygen sensor:

- Do not apply contact cleaner or other materials to the sensor or vehicle harness connectors. These materials may get into the sensor causing poor performance.
- Do not damage the sensor pigtail and harness wires in such a way that the wires inside are exposed. This could provide a path for foreign materials to enter the sensor and cause performance problems.
- Ensure the sensor or vehicle lead wires are not bent sharply or kinked. Sharp bends or kinks could block the reference air path through the lead wire.
- Do not remove or defeat the oxygen sensor ground wire, where applicable. Vehicles that utilize the ground wired sensor may rely on this ground as the only ground contact to the sensor. Removal of the ground wire will cause poor engine performance.
- Ensure that the peripheral seal remains intact on the vehicle harness connector in order to prevent damage due to water intrusion. The engine harness may be repaired using Packard's Crimp and Splice Seals Terminal Repair Kit. Under no circumstances should repairs be soldered since this could result in the air reference being obstructed.

Caution: Refer to Fastener Caution.

Procedure

- Disconnect the heated oxygen sensor harness connector.
- If reinstalling the old sensor, coat the threads with anti-seize compound. Refer to Adhesives, Fluids, Lubricants, and Sealers.

Tip: A special anti-seize compound is used in the HO2S threads. The compound consists of liquid graphite and glass beads. The graphite tends to burn away, but the glass beads remain, making the sensor easier to remove. New, or service replacement sensors already have the compound applied to the threads. If the sensor is removed from an exhaust component and if for any reason the sensor is to be reinstalled, the threads must have anti-seize compound applied before reinstallation.

Tighten

42 Y (31 lb in)

[Top of Page](#)

[EBSCO Support Site](#) [Privacy Policy](#) [Terms of Use](#) [Copyright](#)

© 2013 EBSCO Industries, Inc. All rights reserved

[EBSCO Publishing Green Initiatives](#)