

2005 Chevrolet EQUINOX


Submodel: LS | Engine Type: V6 | Liters: 3.4

Fuel Delivery: FI | Fuel: GAS

Sunroof Housing Rear Drain Hose Replacement


Removal Procedure

1. Remove the headliner. Refer to Headliner Replacement in Interior Trim.

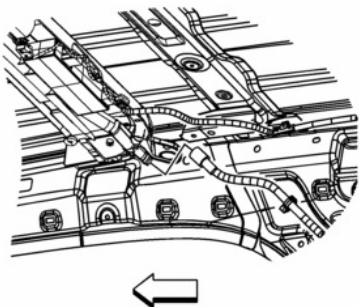

[Click to Enlarge](#)

2. Remove the rear drain hoses from the sunroof module.
3. Remove the tape from the drain hose.

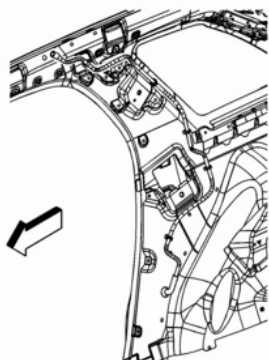


[Click to Enlarge](#)

4. Remove the upper portion of the rear drain hoses from the retaining clips.
5. Remove the rear side trim panels. Refer to Garnish Molding Replacement - Center Pillar Upper in Interior Trim.
6. Remove the lower portion of the rear drain hoses from the retaining clips.
7. Pull the rear drain hoses up through the side rail.

Installation Procedure


1. Route the rear drain hose down through the access hole in the side rail.

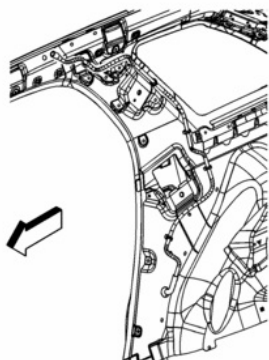

[Click to Enlarge](#)

2. Push the end of the rear drain hoses down into the rear compartment opening.
3. Clip the lower portion of the rear drain hoses into position.
4. Install the rear side trim panels. Refer to Garnish Molding Replacement - Center Pillar Upper in Interior Trim.

5. Clip the upper portion of the rear drain hoses into position.

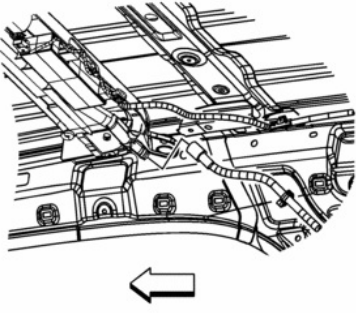

[Click to Enlarge](#)

6. Install the rear drain hoses to the sunroof module.
7. Install the headliner. Refer to Headliner Replacement in Interior Trim.