



AutoZone 1989 Chevrolet Truck G30 1 ton Van 5.7L FI OHV 8cy

Find Parts and Products

FEL-PRO Thermostat Gasket 35062 remove

Outlet gasket

Part #: 35062 Year Warranty

Free In-Store or Curbside Pick Up
 ✓ In Stock | 1318 S PUBLIC RD

Home Delivery
 FREE Next Day Delivery
 Eligible QP
 Order within 38hrs and 12min to receive Tue, Mar 23
 Standard Delivery
 Est. Delivery: Mar 25-26

1 \$329

FITS 1989 Chevrolet Truck G30 1. ton Van 5.7L FI OHV 8cy SEE PRODUCT NOTES

Duraheat Thermostat 15359 remove

195 °F (91 °C)

Part #: 15359 Year Warranty

Free In-Store or Curbside Pick Up
 ✓ In Stock | 1318 S PUBLIC RD

1 \$599




4 Thermostat - removal and installation

1 Symptoms of a faulty thermostat are overheating or cool running of the engine, slow warm-up and an inefficient interior heater.

2 Drain sufficient coolant (about 3 quarts) from the radiator, so the coolant level is below the thermostat housing.

3 Disconnect the radiator upper hose from the thermostat housing, which is located at the forward end of the cylinder head (inline engine) or intake manifold (V6 and V8 engines) (see Illustration) .

4.3 Remove the nuts/bolts (arrow) and lift off the cover (the shape of the cover varies)

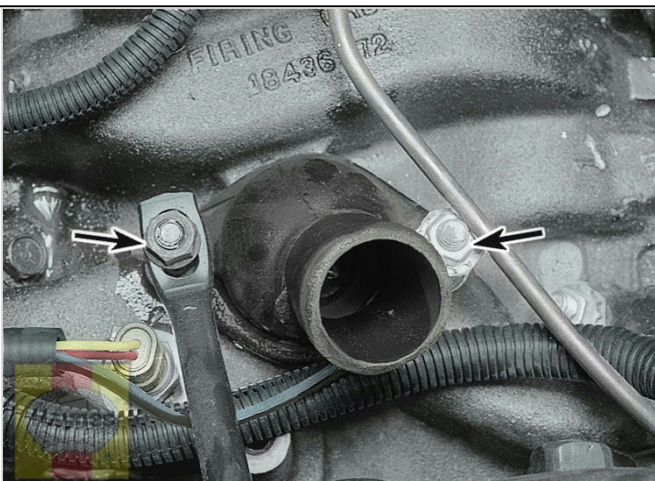

4 Remove the thermostat housing bolts and lift the cover off. It may be necessary to tap the housing with a rubber mallet to break the gasket seal.


5 Lift out the thermostat, noting the direction in which it is installed (see Illustration) .

4.5 Lift out the thermostat - note the location of the spring



6 Use a scraper or putty knife to remove all traces of old gasket material and sealant from the mating surfaces (see illustration) . Make sure that no gasket material falls into the water passages; it is a good idea to stuff a rag in the passage.

4.6 Make sure that the thermostat housing and cover sealing surfaces are completely free of old sealant and gasket material

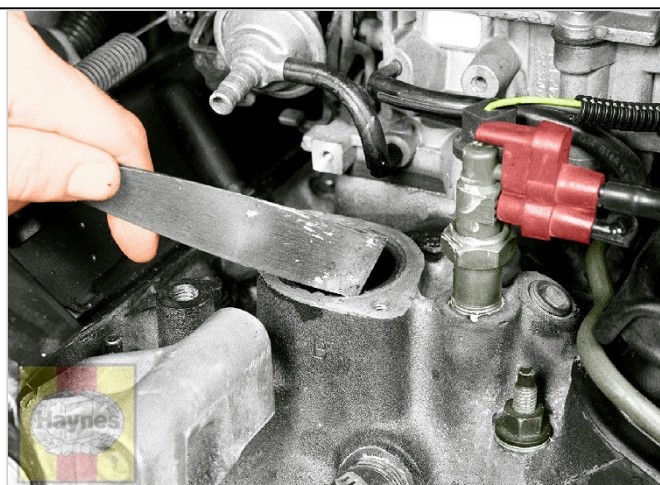

7 Place the new thermostat in position.

8 Place a new gasket in position and apply a bead of silicone sealant to the mating surface of the thermostat housing.

9 Install the thermostat housing and tighten the bolts to the specified torque.

10 Fill the cooling system.

11 Connect the cable to the negative battery terminal.

12 Start the engine, bring the cooling system up to operating temperature and check the thermostat housing and hoses for leaks.

© 2021 Haynes Manuals, Inc. Contact us